

LED LIGHT INDICATOR

To indicate users with the status of reader and status of verification

- a. Blue light
Reader is powered on and on standby to accept fingerprint or card input
- b. Green light
User is verified successfully
- c. Red light
User verification failed. Reader requests user to try again

FINGERPRINT SCANNER

To capture user's fingerprint and the data will be sent to master reader for verification


CARD INDUCTION AREA

To read and capture details of cards and the data will be sent to master reader for verification.

- RFID (Default)
- MIFARE
- HID

ITEM INCLUDED IN R2i PACKAGE:

1. 1 unit of FingerTec® R2i
2. 1 RS232-USB connection wire

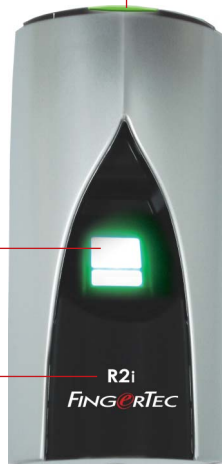

R2i

Fingerprint & Card Capturing Reader



USER GUIDE

CONNECTION TO MASTER READER




Back of R2i

Connection Port of R2i

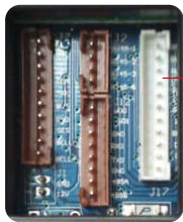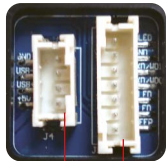

Connection Port of Master Reader

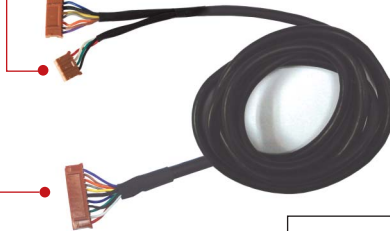

PRECAUTION BEFORE INSTALLATION

The master reader has to have 11-pin connection port as shown in the photo. FingerTec® master reader that are not having this 11-pin connection port could not support FingerTec® R2i.

Turn off the power of the entire system before initiate the installation of FingerTec® R2i to the master reader.

FingerTec® R2i obtains power from the master reader, no additional power supply is required for FingerTec® R2i

FingerTec® R2i can work with FingerTec® M2, FingerTec® R2, FingerTec iKiosk 100 series and FingerTec® Q2i. Enquiry about any other models which could work with FingerTec® R2i, email to info@fingertec.com

Contact support@fingertec.com for any technical assistance